

Birlea®

Assembly Instructions

Thank you for
purchasing a
Birlea product.

For a chance to win a Love 2 Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag **#ShareYourStyle** and **#Birlea**. One winner will be selected at random each month.

To view our full terms and conditions please visit www.birlea.com

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



COLOGNE OTTOMAN-Double & King

Assembly Instructions

Before you begin...

1. Please check in your desired room of use.
2. Unpack all boxes and lay out each component on the floor.
3. Check your product for any damage that may be immediately obvious. If damage is identified, please contact your retailer.
4. Please read through these instructions thoroughly to ensure you have constructed your bed correctly.

WARNING: Use caution when assembling the base. The ottoman contains a powerful mechanism and should only be closed after the mattress is in place.

For Care and Maintenance of your bed...


- Always assemble in your desired room of use.
- Always check all screw and fixings periodically to ensure they are still secure.
- Do not push or pull this bed as it will cause damage.
- Always lift this bed with a second person to prevent damage or injury.
- Keep any sharp objects away from this bed frame.

For your Health and Safety...

- Please don't not jump on this bed.
- Do not use this bed if you find missing, damaged or worn parts. Please contact your retailer.
- Please do not use this bed until you have fully secure all fixings.
- Please keep all small components away from children.
- Please ensure this bed is on an even, level surface.


Also...

If your desired room of choice has a non-carpeted surface ensure please that you use some form of anti-slip protection and **do not** place directly on the wooden floor. This will prevent the bed from moving and therefore collapsing which will void your guarantee...

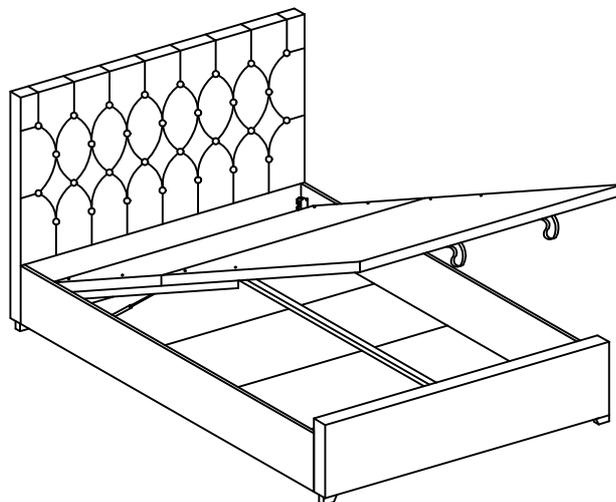





Box 1

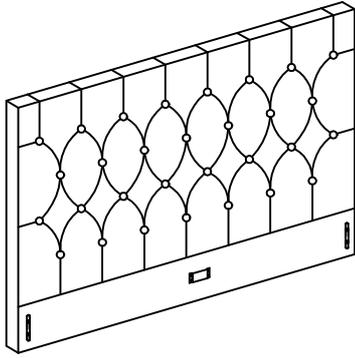


1. Headboard (x1)




Box 2

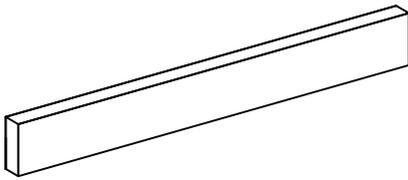


2. Footboard (x1)

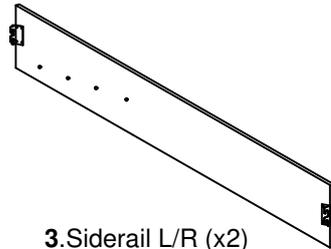


3. Siderail L/R (x2)

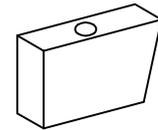


4. Legs (x4)

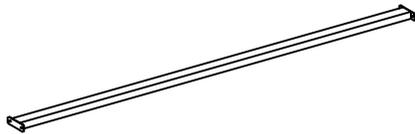


5. Metal Centre Rail (x1)

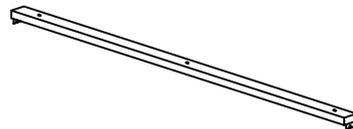

6. Wooden Centre Rail (x1)




7. Support Legs (x3)

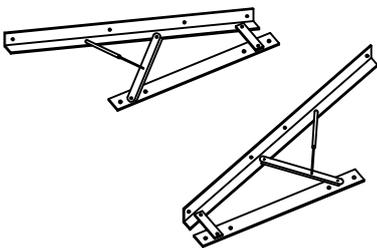


8. Pump Mounting Bracket (x2)





9. Bracket Base (x2)

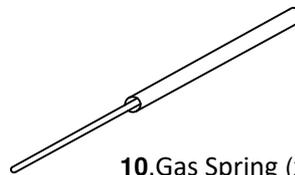


10. Gas Spring (x2)




11. Wooden Frame Bracket (x2)

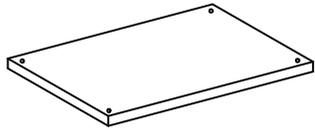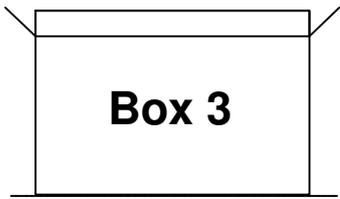

12.Wooden Frame (x1)
(holes are not the same)

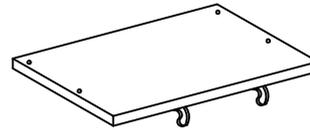

13.Wooden Frame (x1)
(holes are not the same)

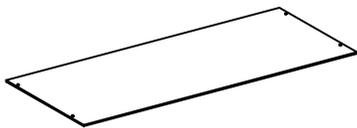


14.Bottom Panel (x4)




Hardware


All fitting are stored within Box 2




**A.M6 x 30 mm JCBC
(x4)**




**B.M6 x 40 mm JCBC
(x11)**




**C.M6 x 50 mm JCBC
(x4)**




**D.M8 x 60 mm JCBB
(x8)**




**E.M6 Spring Washer
(x12)**




**F.M6 Flat Washer
(x12)**




**G.M8 Spring Washer
(x16)**

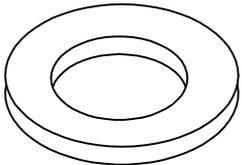


**H.M8 Flat Washer
(x16)**

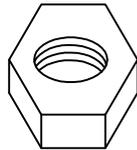


**I.M8 Hex Nut
(x8)**




**J.M4 x 25 mm CSK
(x24)**

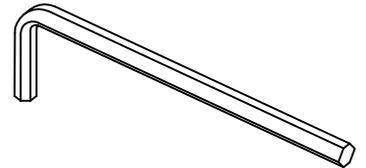


**K.Allen Key M4 x 100mm
(x1)**

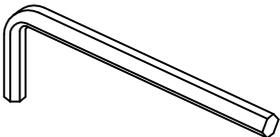

**L.Allen Key M5 x 70mm
(x1)**

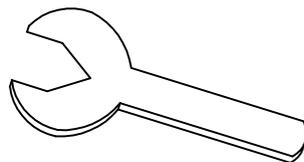

**M.M8 Spanner
(x1)**

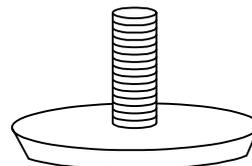


**N.Adjuster
(x3)**

***You will need a screwdriver (not provided)**


Step 1

Unpack all components from the boxes and check you are not missing anything. Please check these against the list on page 3,4 & 5 and should you identify any missing components, please contact the retailer you purchased the bed from.

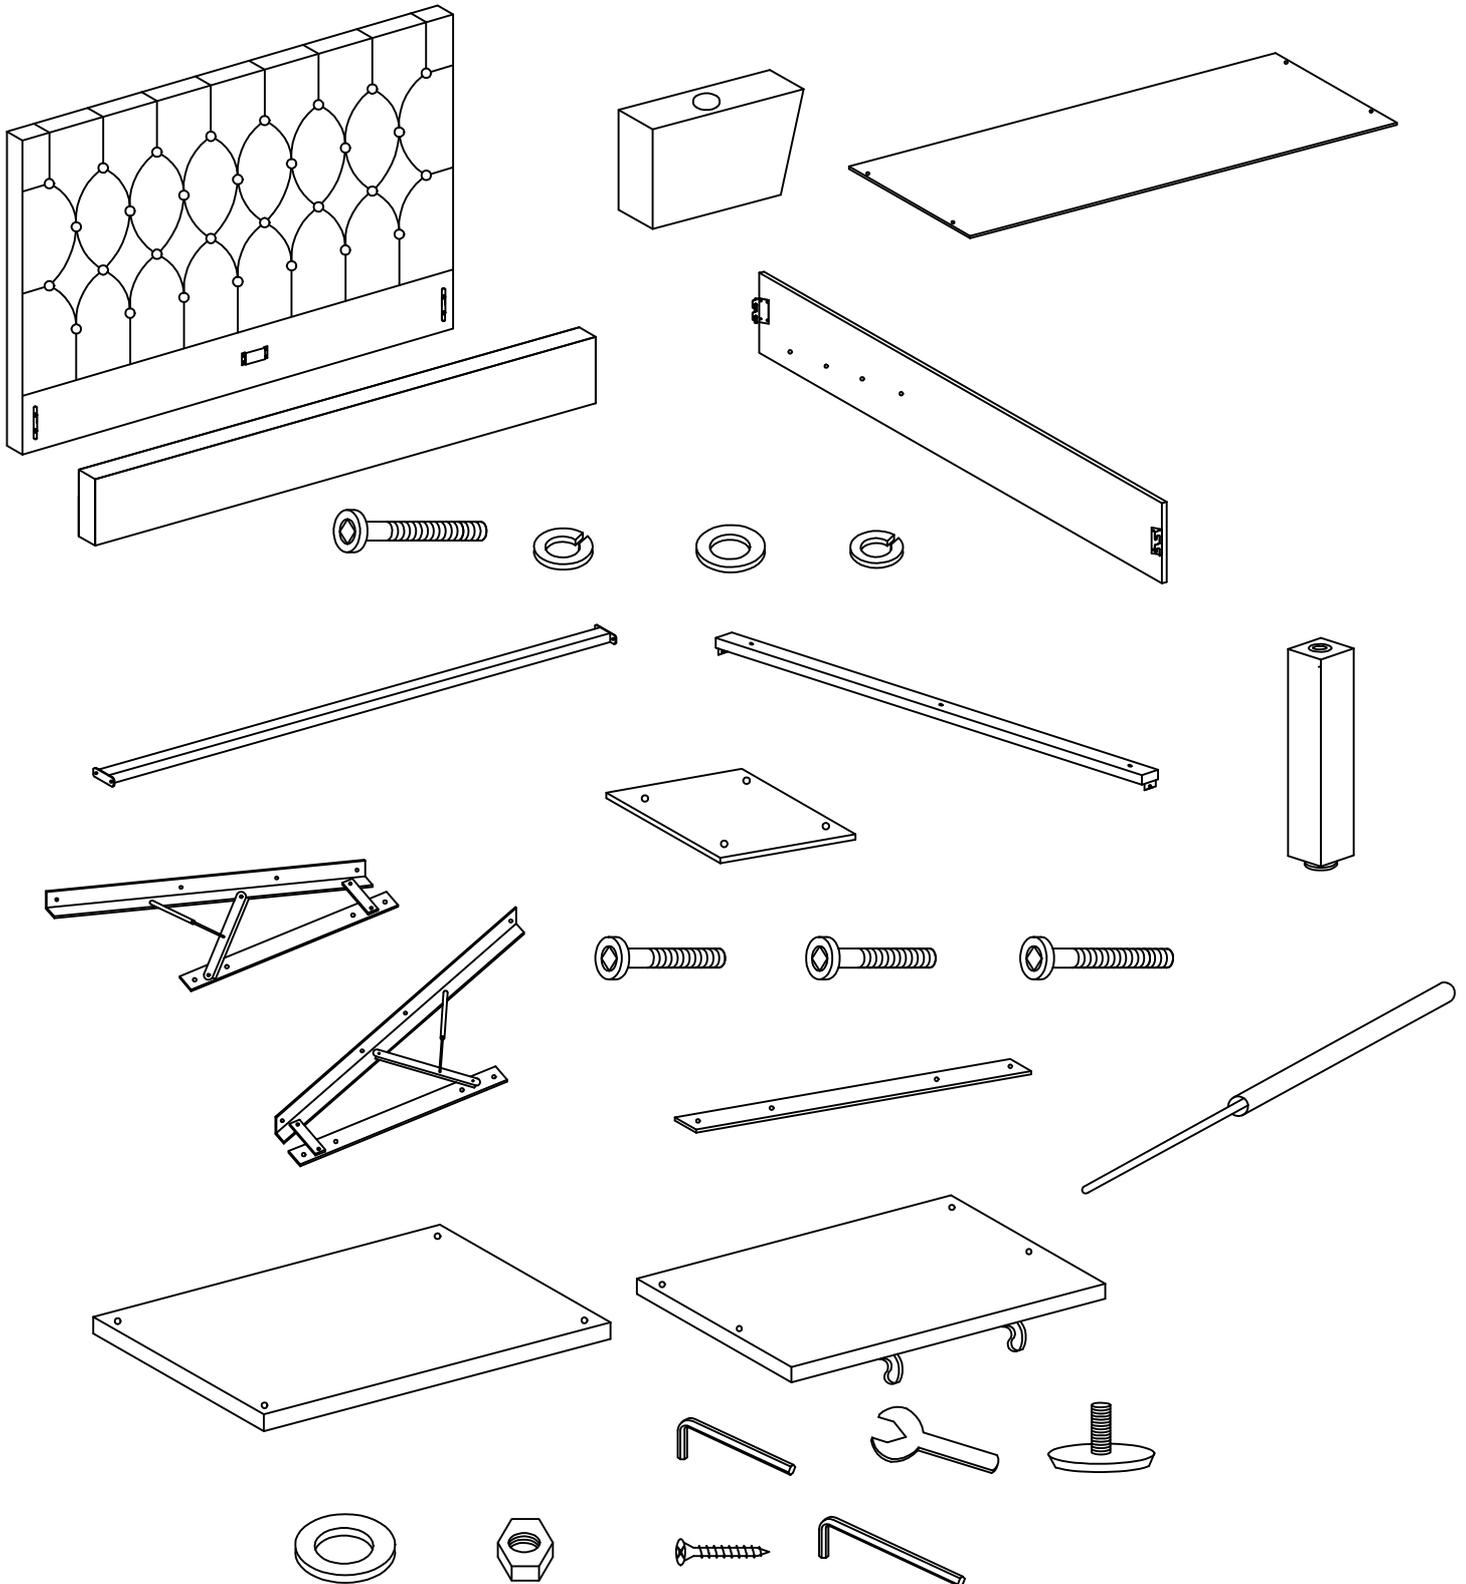


Step 2

Attach the 2x Pump Mounting Bracket (8) and 2x Bracket Base (9) to the both 2x Siderail L/R (3) using hardware 8x M6 x 40 mm JCBC (B) , 8x M6 Spring Washer (E) , 8x M6 Flat Washer (F) and 1x Allen Key M4 x 100mm (K).

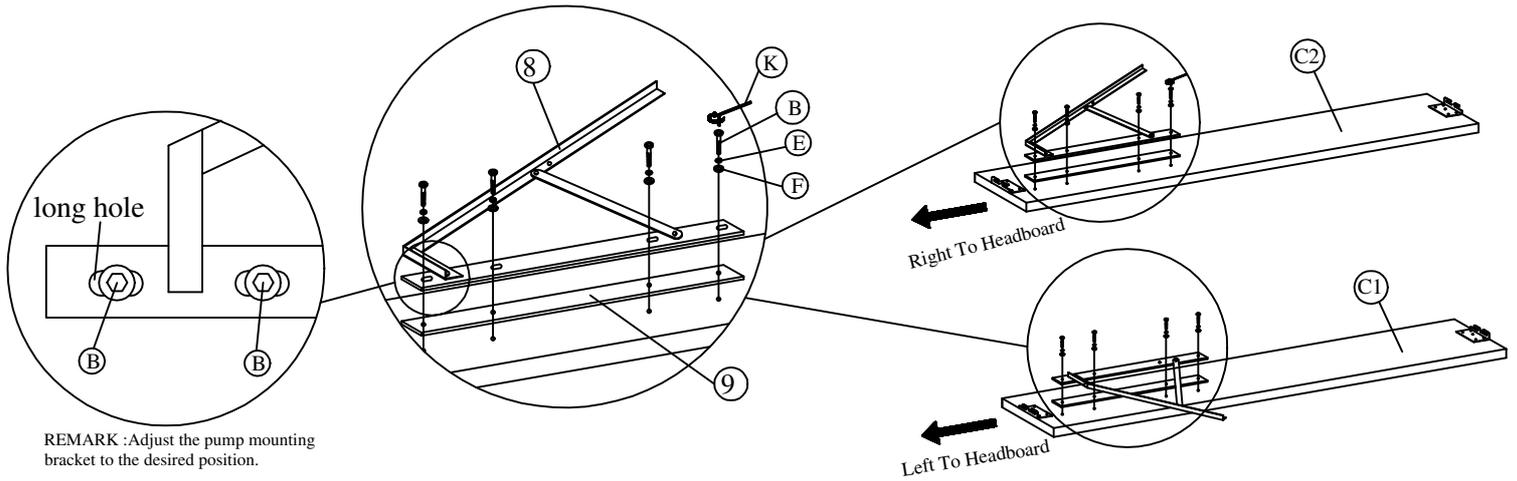


Step 3

Attach the 4x Legs (4) to the 1x Headboard (1) and 1x Footboard (2).

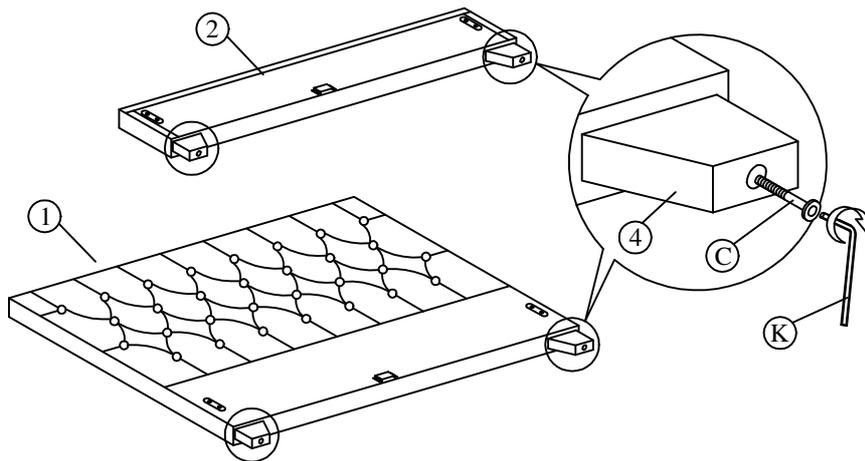

Step 4


Attach the 2x Siderails (3) by pushing the brackets down into place and secure the bolts using hardware 1x Allen Key M5 x 70mm (L) as shown .

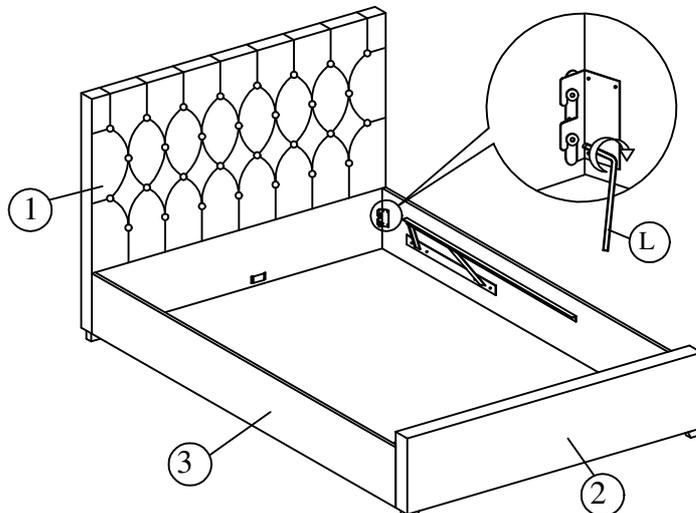

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


Step 5

Attach the 3x Support Legs (7) to the 1x Wooden Centre Rail (6) using hardware 3x M6 x 40 mm JCBC (B) and 1x Allen Key M4 x 100mm (K).

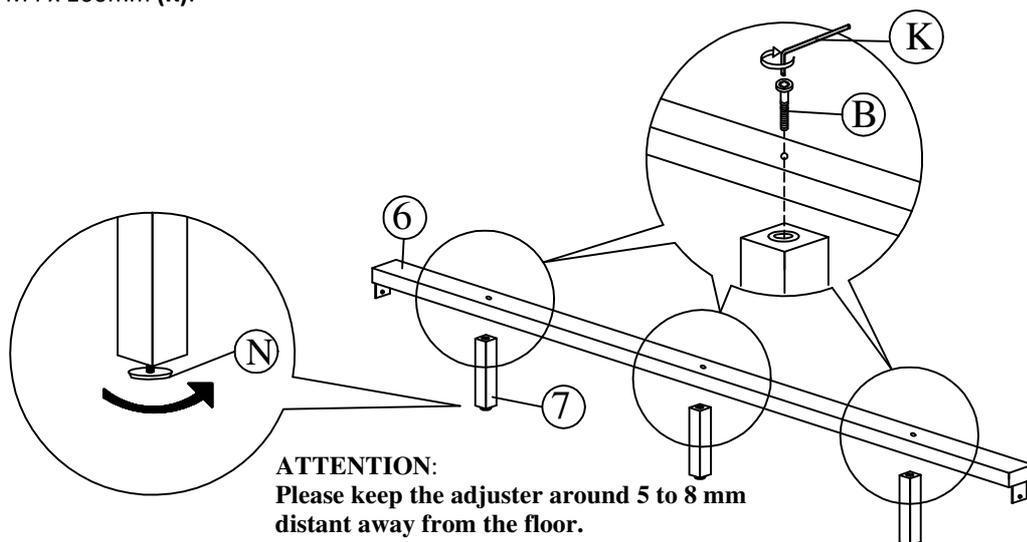


Step 6

Insert the 1x Wooden Centre Rail (6) to the 1x Headboard (1) and 1x Footboard (2).

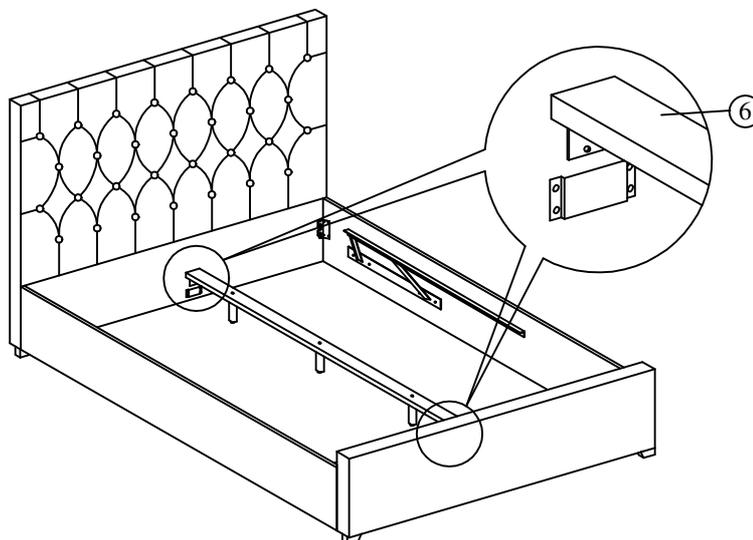

Step 7


Insert the 4x Bottom Panel (14) to the below frame and secure using hardware 16x M4 x 25 mm CSK (J) and a screwdriver (not provided).

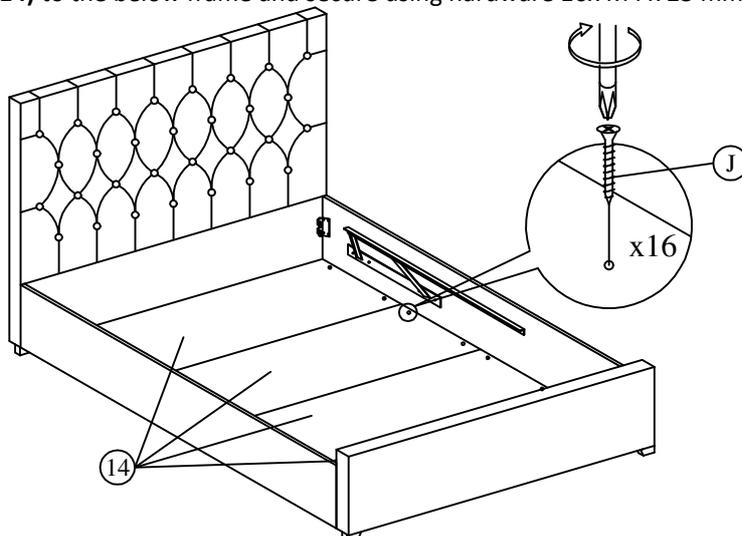

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


Step 8

Insert the 1x Metal Centre Rail (5) to the 1x Headboard (1) and 1x Footboard (2) and secure using hardware 4x M6 x 30 mm JCBC (A), 4x M6 Spring Washer (E), 4x M6 Flat Washer (F) and 1x Allen Key M4 x 100mm (K).

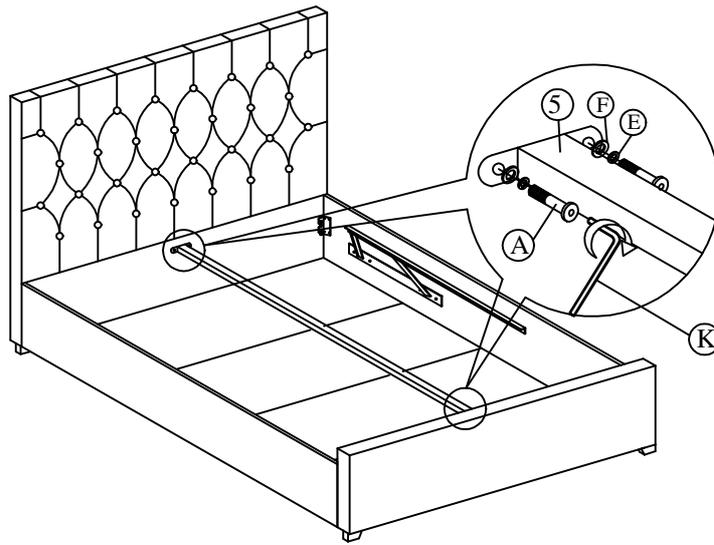


Step 9

Unscrew the Pre-attached hex-nut of 2x Gas Spring (10) and attach it back again as shown. Please fully tighten the nut.

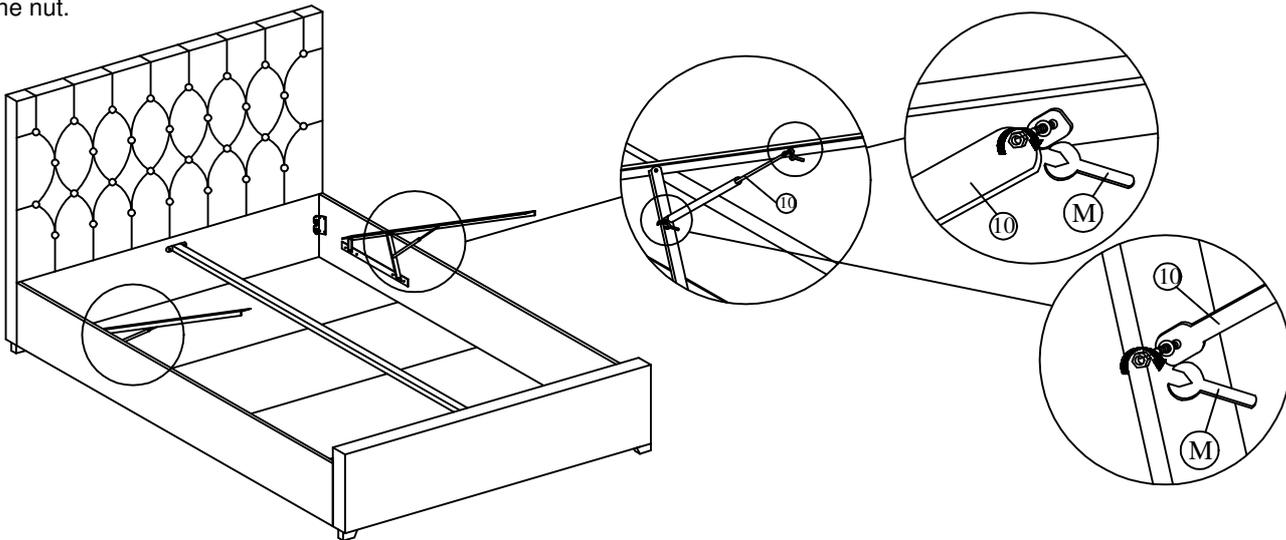

Step 10


Must place the 1x Wooden Frame (12 & 13) in correct position (please follow the position as shown in diagram)

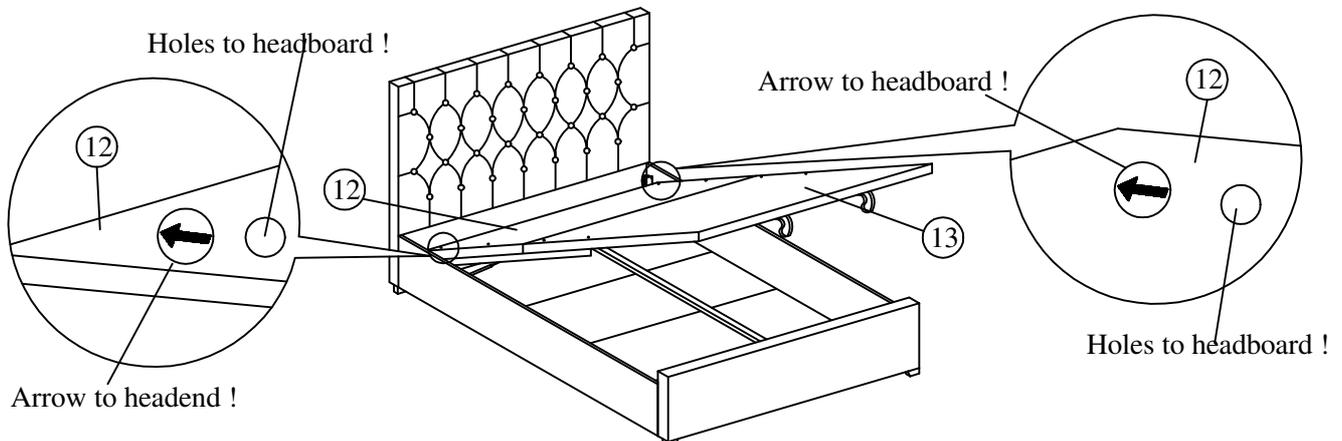

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Step 11


Assembly the 1x Wooden Frame (12) and 1x Wooden Frame (13) to the bracket and tighten all the fitting accordingly .

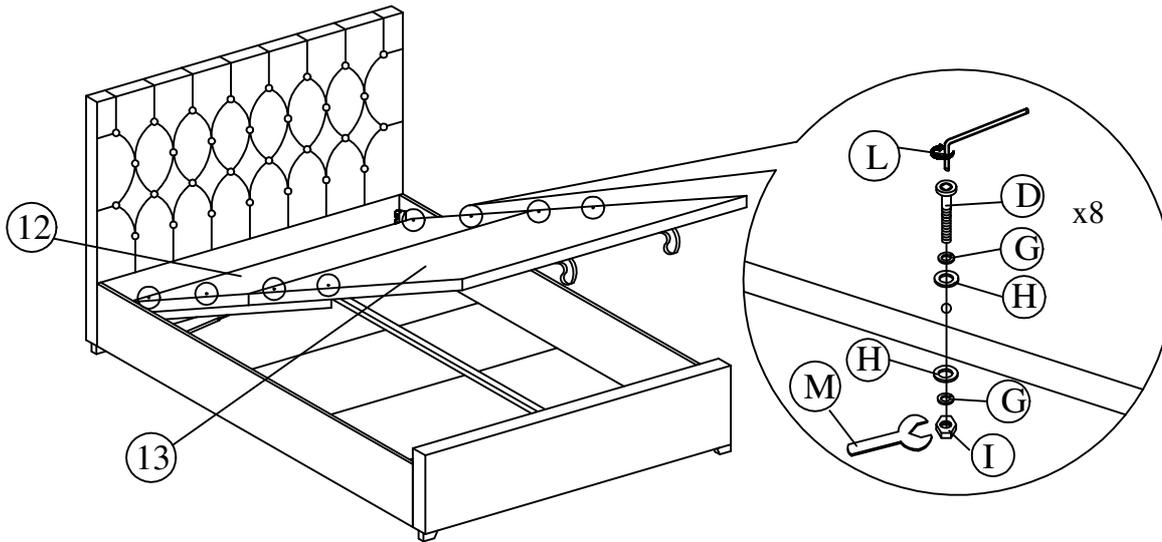

WARNING: Take care when assembling the base, assemble the ottoman as closed to its final position. The Ottoman has a powerful mechanism and after assembly should only be opened when the mattress is in place.


Step 12

Attach the 2x Wooden Frame Bracket (11) to the wooden frame using hardware 8x M4 x 25 mm CSK (J) and a screwdriver (not provided).

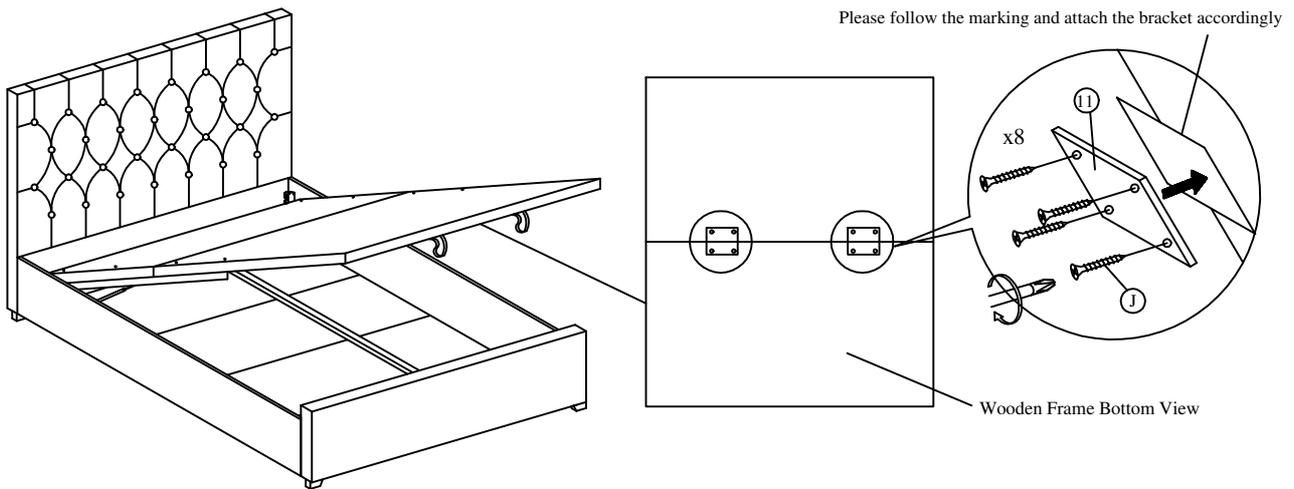

Step 13


Please use the safety lock for safety purpose.

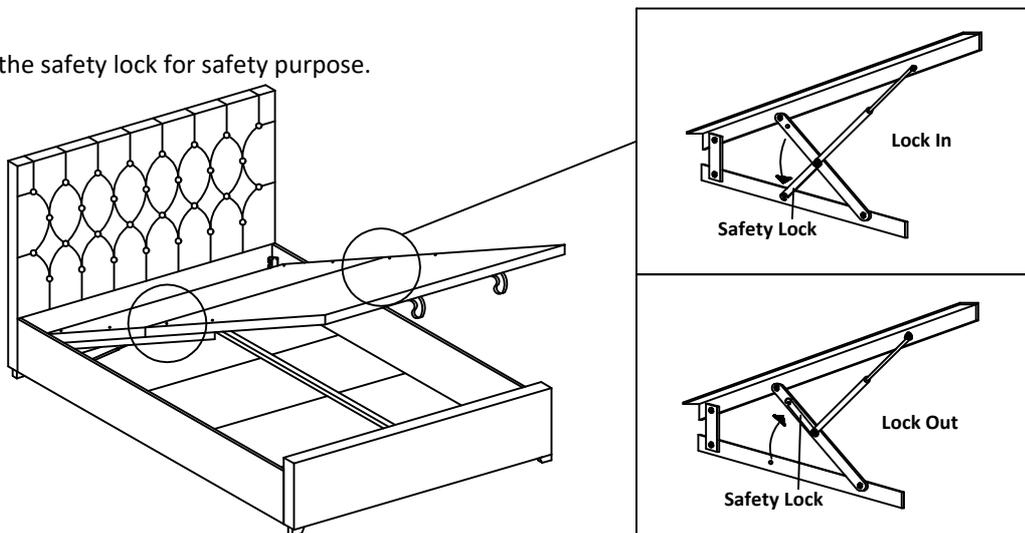

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Additional Information:

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating - Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism - Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children and animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
- Beware of Entrapment - Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding - Except the fitted sheet.

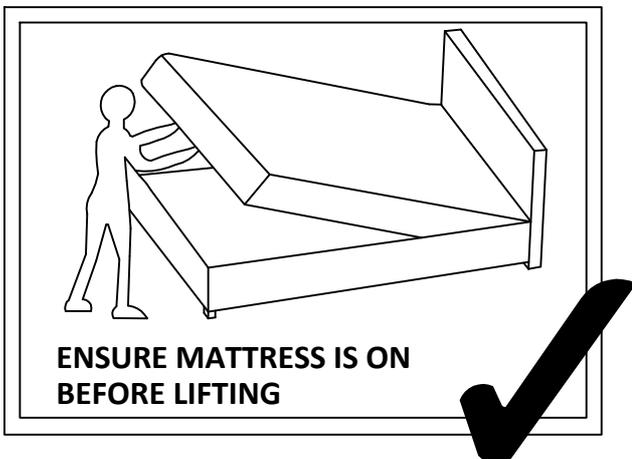

DO NOT use any power tools as this may damage the frame and will invalidate any claim.